

Phone: (269) 488-2752

01/2024

Installation Scenario:

View Series Flex Post Installation.

- This guide covers how to build a Flex Post for Floor to Ceiling Applications.
- This guide applies to all View Series applications.
 - Swing Doors (Pages 4-6)
 - Sliding Doors (Pages 4-6)
 - Non-Door Opening Locations (Pages 7-8)

Nxtwall Components Covered by this Instruction:


- Flex Post
- View Wall-Start
- View L-Brackets
- Flex L-Brackets

Recommended Installation Tools:

- Miter Saw
- Laser Level (or Level)
- Tape Measure
- Impact Driver and/or Drill
- Nylon Mallet/Rubber Mallet
- Phillips Screwdriver
- Utility Knife
- Hammer Drill
- External Attaching Hardware
 - Note: Nxtwall does not include external attaching hardware.
- Cabling/Bracing (If Needed)
 - Note: Nxtwall does not include cabling/bracing.

Flex Post Function

• The function of the Flex Post is to create 90° turns within the layout of the wall system.

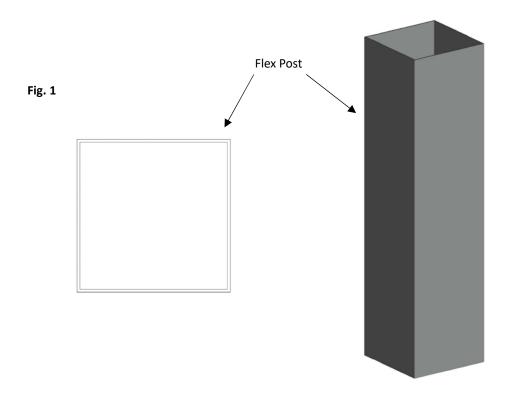





Phone: (269) 488-2752


01/2024

Flex Post Configurations:

- Anytime there is a Partition coming off a Flex Post there will be a Wall-Start attached to the Post. Fig. 2.
 - For floor to ceiling applications the length of the Wall-Start will match the length of the Flex Post.
 - The orientation in which the Wall-Start is attached to the Flex Post is dependent on the situation. These situations will be covered later in this guide.
- When attached the edges of the Wall-Start will be flush with the edges of the Flex Post. Fig. 3.

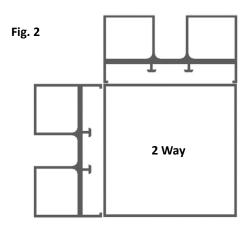

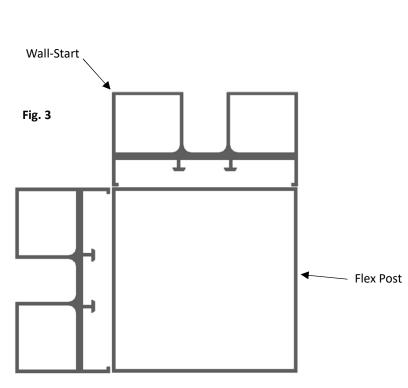

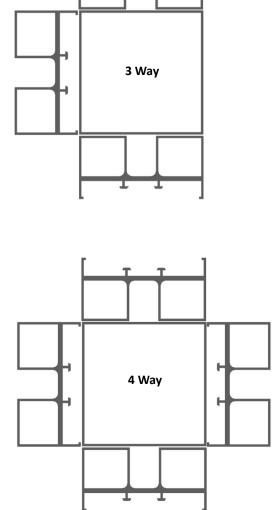



Phone: (269) 488-2752

01/2024


Wall-Start Orientation


The Wall-Start has two sides.


- 1. Stud Side (Fig. 4)
- 2. Glass Side (Fig. 5)


The orientation in which the Wall-Start is placed on the Flex Post is dependent on the situation.

- For the section of a Partition with a Swing or Sliding door coming off a Flex Post the "Stud Side" of the Wall-Start will face away from the Post. The "Stud Side" will accept the Door Jambs or the Finish Cover for the door openings. Fig. 6.
- For the non-door opening section of a Partition with fixed panes of glass coming into a Flex Post the "Glass Side" of the Wall-Start will face away from the Post. Fig. 7.

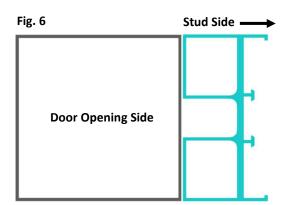

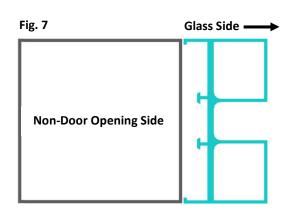

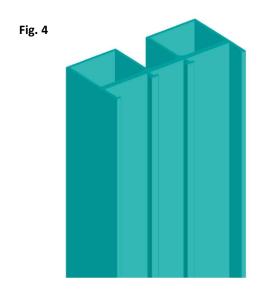

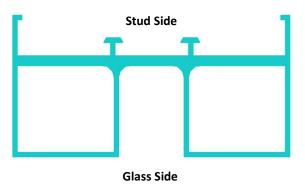





Phone: (269) 488-2752


01/2024


Flex Post Construction/Installation

- This section will cover View Series applications for:
 - Swing Doors
 - Sliding Doors

Flex Post Installation: Door Opening Locations

- 1. Cut Flex Post to length.
 - a. Note: The length will be the Floor to Ceiling measurement.
- Determine the configuration of the Flex Post and which side of the Flex Post will be the door opening.
- 3. Measure and cut the Wall-Start attaching to the Flex Post.
 - a. The length of the Wall-Start will match the length of the Flex Post.
- Flush the edges of the Wall-Start with the Post and attach using 4 − 2 1/2"
 Framing Screws. Fig. 8.
 - a. For door openings make sure the "Stud Side" is facing away from the Post.
 - b. Note: At the top of the Post keep the attaching screw at least 6" down from the top of the Wall-Start. This will ensure the attaching screw does not interfere with the L-Bracket. Fig. 9.

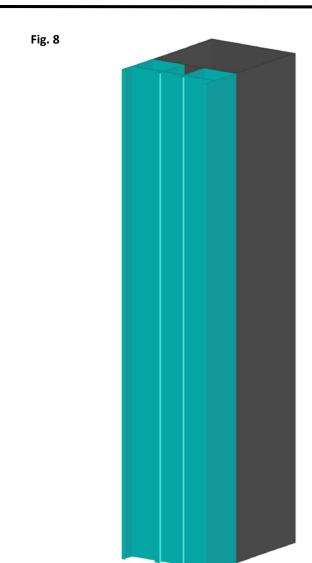

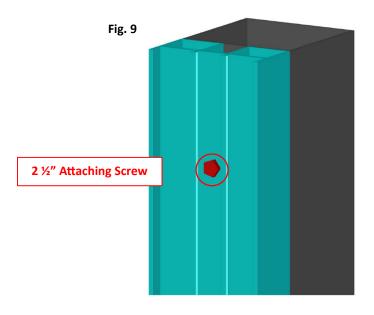



Phone: (269) 488-2752

01/2024

Post Installation: Swing Door Applications

- 1. Attach the Flex Track at the ceiling to the Wall-Start/Flex Post. Fig. 10.
 - a. Slide Flex L-Bracket into the center of the Wall-Start.
 - b. Attach L-Bracket to the Stud using 2 5/8" Framing Screws
- 2. Create a tight fit between the Flex Track and the Wall-Start/Flex Post. Once tight, tighten the set screw. Fig. 10.
 - To ensure the connection stays tight, run a framing screw through an open hole in the L-Bracket and into the Flex Track. Fig. 11.
- 3. Make sure the Flex Post is plumb prior to connecting to other Partitions.


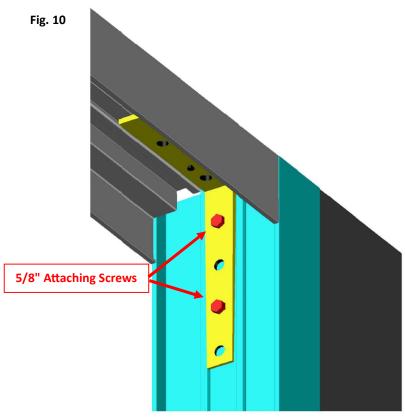


Fig. 11



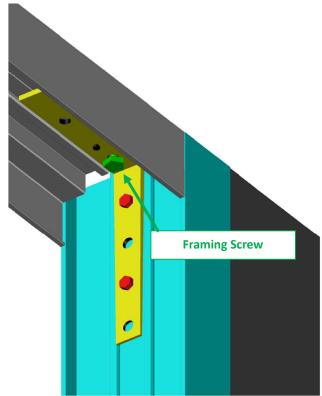



Phone: (269) 488-2752

01/2024

Post Installation: Sliding Door Applications

- 1. Attach the View Guide at the ceiling to the Wall-Start/Flex Post. Fig. 12.
 - a. Slide View L-Bracket into the center of the Wall-Start.
 - b. Attach L-Bracket to the Stud using 2 5/8" Framing Screws
- Create a tight fit between the View Guide and the Wall-Start/Flex Post.
 Tighten the Leveling Bolt in the View Guide tight to the View L-Bracket. Fig. 13.
 - a. This will keep the View Guide tight to the Wall-Start/Post.
 - b. If needed an anchoring screw can be ran through one of the open holes in the View L-Bracket.
- 3. Make sure the Flex Post is plumb prior to connecting to other Partitions.

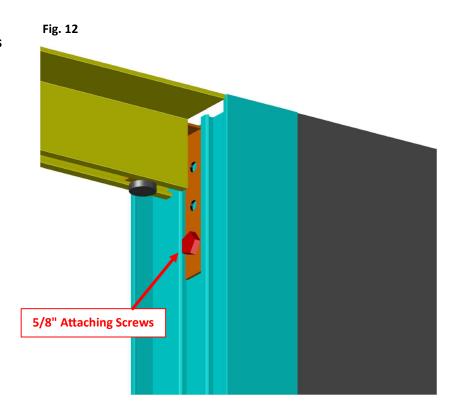

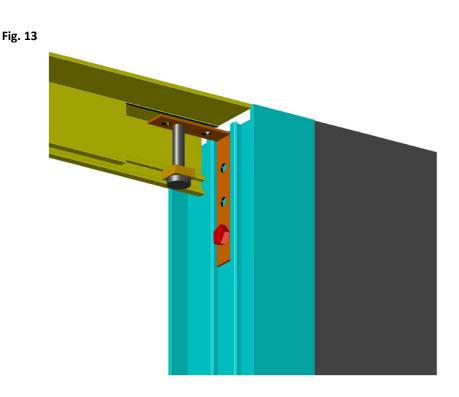



Phone: (269) 488-2752

01/2024

Flex Post Construction/Installation

- This section will cover View Series applications for:
 - Non-Door Opening Locations

Flex Post Installation: Non-Door Opening Locations

- 1. Cut Flex Post to length.
 - c. Note: The length will be the Floor to Ceiling measurement.
- 2. Determine the configuration of the Flex Post and which side of the Flex Post will be the non-door opening side.
- 3. Measure and cut the Wall-Start attaching to the Flex Post.
 - d. The length of the Wall-Start will match the length of the Flex Post.
- 4. Flush the edges of the Wall-Start with the Post and attach using 4 2 1/2" Framing Screws. Fig. 14.
 - For non-door openings make sure the "Glass Side" is facing away from the Post.
 - e. Note: At the top and bottom of the Post keep the attaching screw at least 6" down from the top of the Wall-Start. This will ensure the attaching screw does not interfere with the L-Bracket. Fig. 15.



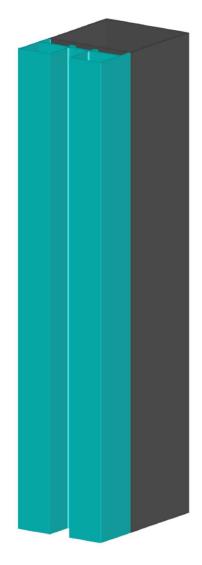


Fig. 14



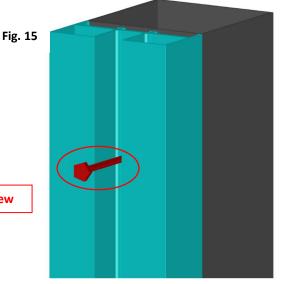

2 1/2" Attaching Screw

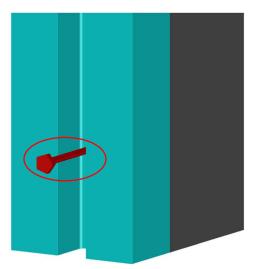

Phone: (269) 488-2752

01/2024

Post Installation: Sliding Door Applications

- 1. Attach the View Guide at the ceiling and the floor to the Wall-Start/Flex Post. Fig. 16 and 17.
 - a. Slide View L-Bracket into the center of the Wall-Start.
 - Attach L-Bracket to the Stud using 2 5/8" Framing Screws
- Create a tight fit between the View Guide and the Wall-Start/Flex Post.
 Tighten the Leveling Bolt in the View Guide tight to the View L-Bracket. Fig. 16 and 17.
 - a. This will keep the View Guide tight to the Wall-Start/Post.
 - If needed an anchoring screw can be ran through one of the open holes in the View L-Bracket.
- 3. Make sure the Flex Post is plumb prior to connecting to other Partitions.

to connecting to other Partitions.

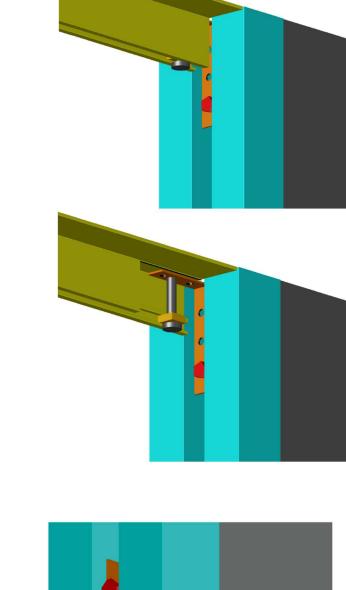


Fig. 17

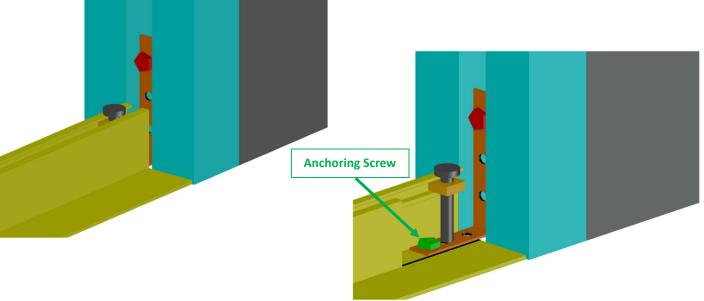


Fig. 16



Phone: (269) 488-2752

01/2024